


What do you do if there is NO service port?

1. Find the Vapor Management Valve.
2. Locate and identify the line going to the charcoal canister from the Vapor Management Valve.

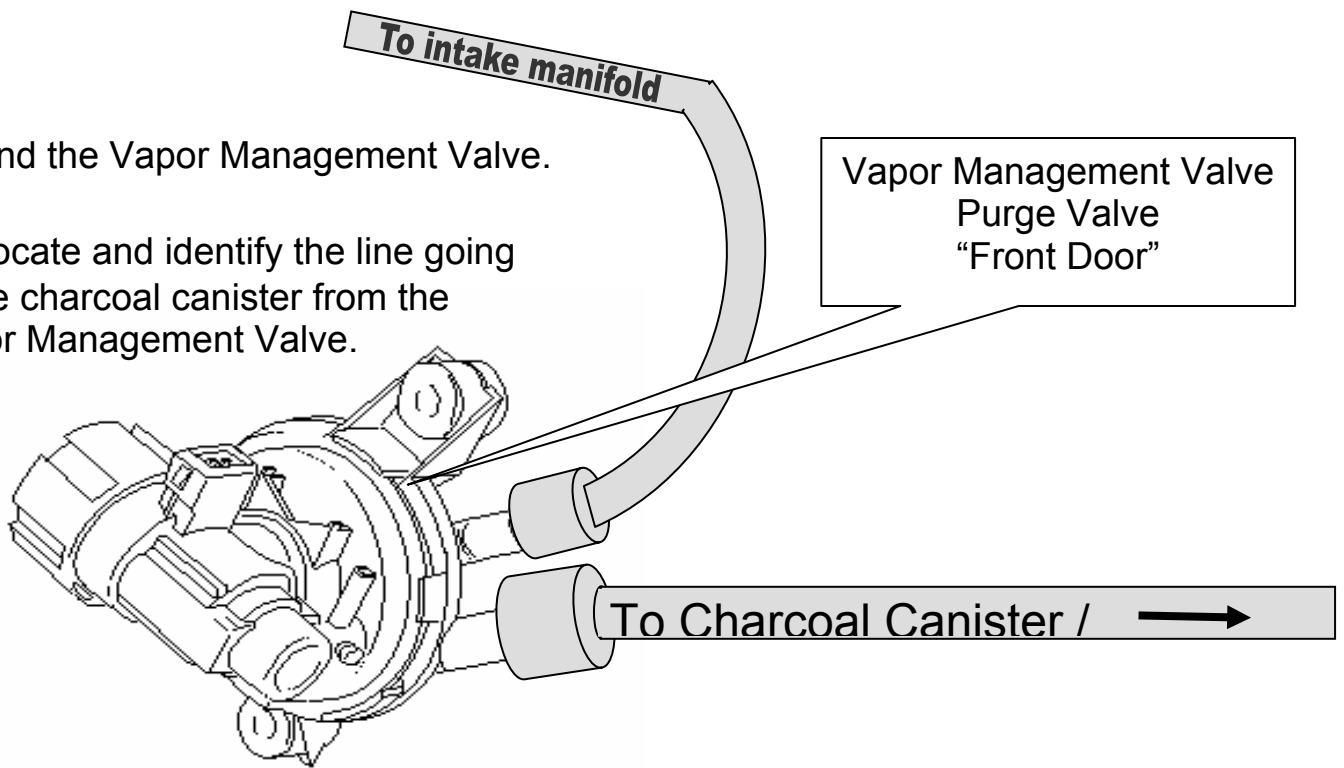

3. Insert the supply line into the line that you just removed from the Vapor Management Valve as shown below.

